Drawing No.	Rev.	Page
LA6-5DTNWB-POE-W18	I	1/9

SPECIFICATIONS

Product Name: Signal Tower

Model: LA6-5DTNWB-POE

PATLITE Corporation

Drawing No.	Rev.	Page
LA6-5DTNWB-POE-W18	I	2/9


1. General Specifications

M	lodel	LA6-5DTNWB-POE		
Rated Voltage		24 VDC		
Power Over Ethernet (PoE)		48 VDC		
Operating Voltage Range		Rated Voltage ±10%		
Power Over Ethernet (PoE)		36 to 57 VDC		
Rated Current Typ.		0.30 A (24 VDC supply): 0.18 A (PoE: 48 VDC supply) *1		
Consumption		0.49 A (26.4 VDC supply): 0.26 A (PoE: 48 VDC supply) *1		
Rated Power	er Typ.	7.2 W (24 VDC supply): 8.6 W (PoE: 48 VDC supply) *1		
Consumption	n Max.	12.9 W (26.4 VDC supply): 12.5 W (PoE: 48 VDC supply) *1		
Signal W	/ire Current	420 mA *1 / 70 mA *2 (26.4 VDC supply): 10 mA (PoE: 48 VDC supply) *1		
Operating Amb	pient Temperature	-10°C to +50°C		
Operating Ar	mbient Humidity	Less than 90% RH (No condensation)		
Storage Ambi	ent Temperature	-10°C to +50°C		
	bient Humidity	Less than 90% RH (No condensation)		
	g Location	Indoors		
Mountin	g Direction	Upright		
	ion Rating	IP54 (IEC 60529)		
	nmental Condition	Upright		
	Resistance	10 m/s² (JIS C 60068-2-6)		
	nmental Condition	Upright		
Insulation Resistance		More than 1 MΩ at 500 VDC between live part and non-current carrying metallic part.		
Ilisulation Resistance		500 VAC applied for 1min between live part and non-current carrying metallic part		
Withsta	nd Voltage	without breaking insulation.		
Mass (Tole	erance ±10%)	630 g		
	Dimensions	Refer to the Outer Dimensions Drawing		
) Tiers	5		
	essure Level	85 dB or more		
		Maximum volume, Buzzer Sound No.1 measured from the front direction of		
Enviror	nmental Condition	the buzzer aperture at 1 m.		
<u>'</u>	Davis /O 1 1	Screwless Terminal Block (Number of Contacts : 12)		
1	Power/Contact	Power: 2 (24 VDC), Contact Input (External relay/NPN/PNP): 8		
Interface	Input	Flashing/Pulse Enable: 1, COM: 1		
r	USB	USB micro-B Terminal USB2.0		
Cama	action Mathael	Ethernet (IEEE802.3 Conformity)		
Communic	cation Method	10BASE-T/100BASE-TX (Auto-MDI/MDIX)		
Γ	LAN	RJ-45 Connector		
PoE		Correspondence to IEEE802.3af Class 0 Conformity		
Operation Interface		Multi-function Button (Set in Head Cover)		
Indicator		Nothing		
Accessory		Hexagon Nut with Flange (M4 SUS) 3 pcs, Screw (M4×20) 3 pcs		
·		Installation Bracket (SZW-060W), Wall mount Bracket (SZK-003W),		
Optional Parts		Upper Bracket (SZP-004□)		
Connectable LAN cable		Category 5e or higher (Both straight cable and cross cable types can be used)		
		*1 Environmental Condition : Lighting all tiers Yellow,		
Remarks		sounding Buzzer sound No.1 at maximum volume.		
Re	marks	Sounding buzzer sound No. i at maximum volume.		

Drawing No.	Rev.	Page
LA6-5DTNWB-POE-W18	I	3/9


	RoHS Directive (EN IEC 63000)	
	EMC Directive (EN 61000-6-4, EN 61000-6-2, EN55032 ClassA, EN55035)	
Conformity Standards	FCC Part 15 Subpart B Class A, ICES-003 Class A	
	KC (KN 61000-6-4, KN 61000-6-2)	
	UL 508, CSA-C22.2 No.14, Recognized Component (File No.E215660)	
	*Only for 24 VDC	
	UL 60950-1, CAN/CSA C22.2 No. UL60950-1-07 Recognized Component	
	(File No.E480103)	
Damarka	Conforms to the CE Requirements	
Remarks	Conforms to the UKCA Requirements	

2. Model Number Configuration

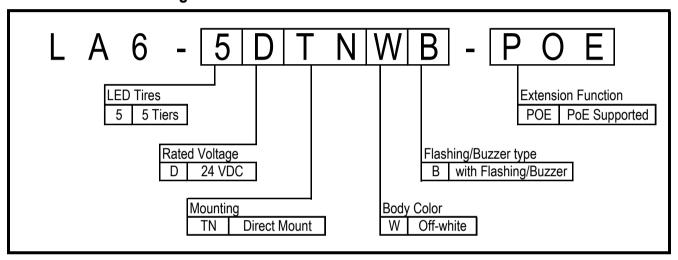


3. Wiring Diagram

3.1. Wiring Example

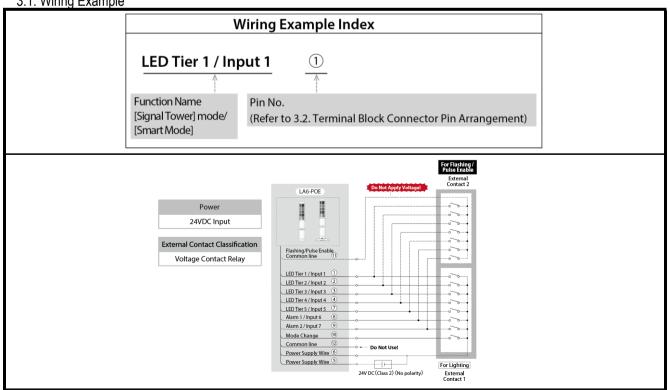


PATLITE Corporation

Drawing No.	Rev.	Page
LA6-5DTNWB-POE-W18	I	4/9

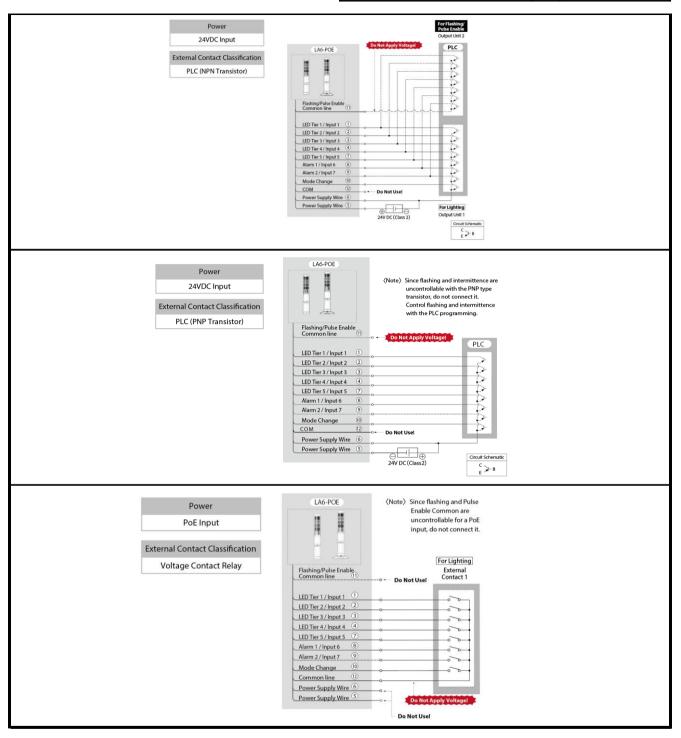



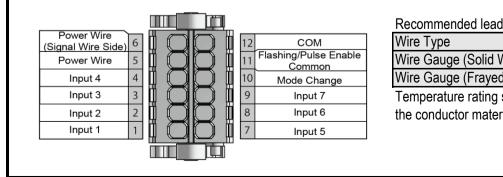

Recommended lead wire specifications

Wire Type	UL1007/UL1430
Wire Gauge (Solid Wire)	0.2-1.5 mm ²
Wire Gauge (Frayed Wire)	AWG24-16

Temperature rating should be above 75°C, and the conductor material should be of copper wire.

PATLITE Corporation

Drawing No.	Rev.	Page
LA6-5DTNWB-POE-W18	I	5/9

4. Operating Specification

4.1.Annunciator Specification

Signal Tower Mode		Signal Tower LED and buzzer can be controlled with registered color and sound.		
	LED Unit Control	Each tier can be controlled with Continuous Lighting, Flashing, Lights-off		
	Display Color Variations	9 Colors		
	Buzzer Sound	Select one from buzzer sounds No. 1, No. 2 and from No. 3 to No. 11		
Sma	rt Mode	Information such as "Takt time" and "Time count" can be notified.		
	Smart Mode types	"Single-display Type", "Time-trigger Type" and "Pulse-trigger Type"		
	Single-display Type	The registered pattern can be executed.		
	Time-trigger Type	The pattern transitions can be controlled in accordance to time.		
	Pulse-trigger Type	The pattern transitions can be controlled in accordance to a pulse-trigger input.		
	Display Color Variations	21 Colors		
	Buzzer Sound	11 Patterns		
Deta	iled Command Control	Control by using commands to specify display color and buzzer pattern for each stage.		
	LED Control	Continuous Lighting, Flashing, Lights-off can be controlled for each Tier.		
	Display Color Variations	9 Colors		
	Buzzer Sound	11 Patterns		
Indiv	idual Flashing Control	The color and operation pattern of each tier of the LED unit		
		and the alarm pattern can be controlled.		
	LED Control	Continuous Lighting, Flashing, Lights-off can be controlled individually for each Tier.		
	Display Color Variations	9 Colors		
	Buzzer Sound	2 Patterns (buzzer sounds No. 1 and No. 5)		

4.2. Signal Tower Specification

T.Z. Olgital Tower opcollication			
Flashing Rate	30±2 Flashes per Minute, 60±2 Flashes per Minute, 120±2 Flashes per Minute		
Luminous Intensity (typ) *1	Red (1,000 mcd), Yellow (1,700 mcd), Green (2,600 mcd), Blue (1,000 mcd),		
	White (1,250 mcd), Purple (800 mcd), Pink (850 mcd),		
	Lemon yellow (2,150 mcd), Sky-blue (2,150 mcd)		
Remarks	*1 Due to the characteristics of the LED elements, a variation in difference of		
	the color tone and brightness of every product may occur.		

4.3. Buzzer Specification

Buzzer Sound (Typical Frequ	uency)	11 Patterns
No	.1	2400 Hz Continuous beep sound
No	.2	2400 Hz Rapid intermittent beep (0.05 sec. sound / 0.05 sec. silence)
No	.3	2400 Hz Long intermittent beep (1.5 sec. sound / 1.5 sec. silence)
No	.4	2400 Hz Fast intermittent beep (0.5 sec. sound / 0.5 sec. silence)
No	.5	3600 Hz Continuous beep Sound
No	.6	3600 Hz Rapid intermittent beep (0.05 sec. sound / 0.05 sec. silence)
No	.7	3600 Hz Long intermittent beep (1.5 sec. sound / 1.5 sec. silence)
No	.8	3600 Hz Fast intermittent beep (0.5 sec. sound / 0.5 sec. silence)
No	.9	2400 Hz & 3375 Hz Multiplexed Beep (0.25 sec. / 0.25 sec.)
No.	10	2400 Hz & 3600 Hz Multiplexed Beep (0.25 sec. / 0.25 sec.)
No.	11	4000 Hz & 4800 Hz Multiplexed Beep (0.25 sec. / 0.25 sec.)

Drawing No.	Rev.	Page
LA6-5DTNWB-POE-W18	I	6/9

4.4 Contact Input Specifications

Mute	Silence the buzzer sound while the smart mode is executed.
STOP	Temporarily pause pattern transition while executing the Time-trigger in Smart Mode *1
	Display a dedicated pattern while executing the Time-trigger in Smart Mode *1
Clear	Stop execution of the patterns in the Smart Mode and resume from the first pattern. *2
	Turn off the Signal Tower and stop the Buzzer. *3
Pulse Trigger	Execute transition of patterns in Smart Mode.
Remarks	*1 Select any of them.
	*2 Executable only when controlling signal wires.
	*3 Executable only by controlling from commands.

5.Function Specifications

5.1 Main Unit Control Function

Signal Wire Control		Controllable in the Signal Tower Mode or Smart Mode			
Comma	and Control	Select from Modbus/TCP, HTTP, Socket Communication.			
	Modbus/TCP	Controllable with Modbus/TCP.			
	HTTP/HTTPS	Controllable with HTTP Command.			
	Socket Communication	Controllable with PNS Command/PHN Command.			
Contact Input		Mute, STOP, Clear, Pulse Trigger can be controlled.			

	Controllable Action						
Command	Signal Tower	Smart	Detailed	Clear	Mute	STOP	Pulse
Command	Mode	Mode	Command Control	Clear Mule	Mute	3106	Input
Signal Wire Control	✓ *1	V	-	V	V	✓	V
Modbus/TCP	'	V	✓	/	'	✓	/
HTTP Command	'	V	✓	V	'	✓	'
PNS Command	'	V	✓	V	✓	✓	✓
PHN Command	✓ *2	-	-	-	-	-	-
Contact Input	-	-	-	V	'	V	/

^{*1} Can sound three buzzer patterns.

5.2 Main Unit Status Acquisition Function

Modbus/TCP	Current status of Signal Tower, Buzzer, Contact Input can be acquired.
Socket Communication	Current status of Signal Tower, Buzzer, Contact Input
	by PNS Command/PHN Command can be acquired.
HTTP/HTTPS	Current status of Signal Tower, Buzzer, Contact Input
	and Firmware Version can be acquired by HTTP Command.

	Acquisition data						
Command	LED Unit	Buzzer	Smart Mode	Contact	Color	MAC Address	Firmware
Command			Status	Input	Information	MAC Address	Version
Modbus/TCP	✓	/	✓	/	✓	-	-
PNS Command	✓	/	/	/	✓ *3	'	1
PHN Command	✓ *1	✓ *2	-	-	-	-	1
HTTP Command	✓	/	>	/	>	'	✓ *4

^{*1} Tier 1 to Tier 3 Lighting, Flashing, Lights-off status can be acquired.

^{*2} Control Flashing and lighting for Tier 1 to Tier 3; Control Buzzer pattern sound No. 1 and No. 2.

^{*2} Buzzer pattern No.1 and No.2 can be acquired.

^{*3} RGB color code can be acquired.

^{*4} LED Unit Firmware Version and LAN Unit Firmware Version can be acquired.

Drawing No.	Rev.	Page
LA6-5DTNWB-POE-W18	I	7/9

5.3 Status Transmission Function

nformation Status Fransmission Function	Transmit the present status of the Signal Tower from the controlled signal wire.			
Number of registrable destinations	1			
Communication method	Socket Communication			
Transmission data	Details			
Signal Tower status information	Continuous Lighting, Flashing, Lights-off			
Smart Mode status information	Group Number, Mute Input, STOP Input, Pattern Number			
Other information	MAC address of this product, LED Unit color information, Last pattern received information			

5.4 Link Function

Mirroring	Can transmit status data of a Master LA6-POE to other LA6-POE and control				
	that same status.				
Number of registrable destinations	8				

5.5 Main Unit Setting Function

Automatic Network Setting	Network setting in this product can communicate with			
	a DHCP server to be set automatically.			
LED Color Setting	The LED color of the Signal Tower can be changed by the signal wire			
_	by setting it with the web browser or Multi-function Button.			
Volume Control	The Buzzer Volume can be set with the web browser or Multi-function Button.			
Main Unit Setting	Various settings to the Main Unit can be accessed by the web browser.			
Configuration Setting	Various configurations of the Main Unit can be read and written as setting files.			
Supported Setting Languages	Japanese, English			
Supported Application	EDITOR for LA series			
	LA6-POE Configurator software.			
	*Visit our company's home page and download the latest application software for free.			

Drawing No.	Rev.	Page
LA6-5DTNWB-POE-W18	I	8/9

[Handling Precaution]

◆About the handling of this product

- This product (including software) is shipped only after undergoing strict quality controls and inspections. However, should you encounter any issues, please contact your PATLITE sales representative.
- This product (including software) is developed, designed and manufactured for general usage, such as office use, personal use, standard industry, and other related systems. Do not use, either directly or indirectly, in applications where a high level of safety is required, such as where human life is involved. We shall not be held liable for any damages or losses, nor be held responsible for any claims by a third party, as a result of using this product.
- The suitability of this product in the system, with other machines and equipment, shall be tested and confirmed by the customer. We assume no responsibility regarding this. Design safety into the system to cope with misoperation, misuse, going offline, and other unforeseen operation of this product.
- •We bear no responsibility for damages, lost opportunities, lost profits, compensation for accidents, or other costs including but not limited to personnel, construction, transportation, and shipping costs, related to using this product. We bear no responsibility for defects in other products, regardless of the other product's connection to this product (such as a communication line), or for the cost of repairing damages, losses, defects, or recovering lost data related to using the other products, including but not limited to personnel, construction, transportation, and shipping costs.
- •To improve the functionality in the software for this product, we will update the software at our own discretion. We bear no responsibility for the results of software updates, such as damages, lost opportunities, lost profits, compensation for accidents, or other costs including but not limited to personnel, construction, transportation, and shipping costs, related to using this product. We bear no responsibility for defects in other products, regardless of the other product's connection to this product (such as a communication line), or for the cost of repairing damages, losses, defects, or recovering lost data related to using other products, including but not limited to personnel, construction, transportation, and shipping costs.
- Note the following statements regarding the software for this product, which require prior written consent from PATLITE:
- * Do not duplicate the software for this product.
- * Do not alter, combine, reverse-engineer, decompile, or disassemble the software for this product.
- * Do not license, rent, or resell the software for this product to a third party.
- * Do not store the software of this product on a network so it can be transmitted to a third party.
- * Do not remove the copyright notice or other trademark and company rights attached to the software for this product.

◆Things you should always do for your safety

- Do not disassemble or modify the product. Failure to do so may lead to product malfunction or cause fire or electrocution.
- Avoid spilling liquids (such as water or chemicals) into this product. Avoid dropping foreign metallic objects (such as copper wire) into this product.
 Failure to follow these instructions could result in electric shock or equipment damage.
- Do not drop or hit this product. Failure to follow these instructions could result in electric shock or equipment damage.
- Do not pull strongly the cable to be connected, or use damaged cable. It becomes a disconnection or a short circuit, and this product or connected equipment may be broken or it may cause ignition.
- Do not apply too much force to switches and buttons on this product. Failure to follow this instruction could result in equipment damage.

◆Installation

- Turn off the power when wiring, inspecting, or repairing this product. Failure to follow this instruction could result in equipment damage.
- Do not install in locations near fire, or environments with high temperature and humidity. Do not install this product where corrosive or flammable gas is present.
- Do not install on an unstable surface. Failure to follow these instructions could result in injury or equipment damage.
- This product is rated for indoor use only. Please install and use this product indoors only.
- Avoid the following locations for installation of this product.
- * Places exposed to direct sunlight.
- * Places near fire or environments with high temperatures and humidity.
- * Environments where temperature changes are severe, and where there is condensation.
- * Environments with poor breathability and ventilation.
- * Places where external vibrations are directly transmitted to this product.
- * Environments where corrosive gas is present.
- * Locations exposed to salty sea air.
- * Locations near strong magnetic fields.
- * Environments where there is dust, iron powder, and so on.
- * Environments where chemicals and oil mist are present.

◆About maintenance

- Do not clean this product with volatile chemicals such as benzine or thinners, or with chemical wiping cloths as it could damage the product.
- · Clean this product with a soft, dry cloth.
- If the dry cloth is unable to clean off any dirt and grime, wipe the product firmly with a slightly water-moistened cloth.

