

Drawing No.	Rev.	Page
WDS-WIN01-W18	F	1 / 3


SPECIFICATIONS

Product Name:Hardware System Setting Software

Model:WDS-WIN01

PATLITE Corporation

1. Model

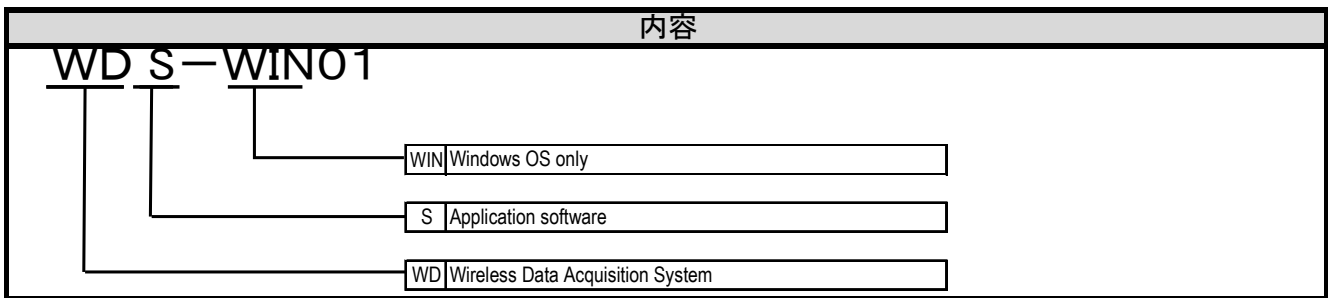

2. General Specifications

Item	Specifications
Supported Products	Receiver: WDR-L-Z2, WDR-LE-Z2 WDR-L-Z2-PRO(-L)、WDR-LE-Z2-PRO(-L) Transmitter: WDT-6M-Z2, WDT-5E-Z2, WDT-4LR-Z2, WDT-5LR-Z2, WDT-6LR-Z2, WDT-6LR-Z2-PRO WD PRO Base Unit: WDB-D80S-PRO
Maximum number of WDR connections	20 units (maximum 1 unit for USB serial connection)
Receiver Connection Methods	LAN socket connection / USB serial connection
Maximum number of WDT units to administer	600 unit
Operating Environment	Supported operating systems Windows® 7 (32 bits/64 bits) Windows® 8.1 (32 bits/64 bits) Windows® 10 (32 bits/64 bits) Windows® 11 (64 bits) Windows® Server 2012 R2 (64 bits) Windows® Server 2016 (64 bits) Windows® Server 2019 (64 bits) Windows® Server 2022 (64 bits)
	Supported Languages Japanese / English / Simplified Chinese / Traditional Chinese / Korean / Thai / Indonesian / Spanish (select manually)
	Execution authority Administrator / Standard user * Administrator user authority is required for installation
	Requirements Personal computer with Windows® functioning normally (does not work with tablet PC) .NET Framework 4.5 installed

3. Functional Specifications

Item	Specifications
Standard functions	<ul style="list-style-type: none"> ○ Data collection^{*1} <ul style="list-style-type: none"> ▪ Collect changes in signal wire(signal tower control line / external input line^{*2}), RS-232C data^{*2}, clear input data^{*2} ▪ Output changes in signal wire(signal tower control line / external input line*2) to CSV data. ▪ Output changes in clear input data^{*2} to CSV data. ▪ Output changes in Count value information to CSV data. ▪ Output RS-232C Communication information^{*2} to CSV data. ○ WDT/WDR settings <ul style="list-style-type: none"> ▪ Set up or change Transmitter. (Include WD PRO Base Unit) ▪ Set up or change Receiver. ○ Maintenance^{*1} <ul style="list-style-type: none"> ▪ User name file output / input <p>^{*1} License authentication required for use ^{*2} Only when using WDT-6LR-Z2-PRO and WDB-D80S-PRO</p>

指定公差 General tolerance	角度公差 ±[°]			寸法公差 ±[mm]					図番 Drawing No.		ページ Page		
	短辺長さ Length of short side	~	~100	6	30	120	300	1000	WDS-WIN01-W18		3 / 3		
	精 f	10	50	100	精 f	0.05	0.1	0.2	0.4	0.6	改訂 Rev.	年月日 Date	改訂履歴 Revisions
	粗 v	3	1.5	1	0.5	中 m	0.1	0.3	0.5	0.7	1		
					粗 c	0.3	0.5	1	1.2	2	△		

Front Surface

Back Surface



License number (17 digits)

システム運用ソフトウェア

- ・インストールの際は、License Key が必要です。本 License Key を大切に保管してください。
- ・ライセンスキーを紛失した場合はソフトウェアの紛失同等の扱いとなり再発行はできません。
- ・アプリケーションソフト本体は下記の手順でダウンロードしてください。

■手順1：ご購入いただきましたハードウェアのお客様登録をお願いいたします。
⇒『WDR-L(E)-Z2』をご購入のお客様の場合
<https://www.patlite.jp/sol/regist/registwdz2.html>
⇒『スタートアップキット』をご購入のお客様の場合
<https://www.patlite.jp/sol/kitregist/regist-wdz2.html>

■手順2：お客様登録完了後にダウンロードURLを自動返信メールにてご案内いたします。

Hardware System Setting Software

- ・ Agree with the enclosed contract in order to use this application software.
<http://www.patlite.com/product/detail000000655.html>
- ・ A license key is required for the installation and use of this application software. Store the license key in a safe place.
- ・ If the license key is lost, it will be the same as losing the software and cannot be reissued.

PATLITE®

8951005251A
17.04.YMT

番号 No.	部品名 Part Name	数量 Qty.	記事 Remarks			
機種 Model	WDS-WIN01	特注No. S.P.No.	図名 Name Outer Dimensions Drawing			
品目コード Part No.	-	尺度 Scale	三角法 3rd Angle P.	単位 Unit mm	株式会社 PATLITE Corporation	